

# On-Pin Golf Guru4



## User Manual

## Table of Contents

.....	1
User Manual for GURU 4.....	1
.....	1
Table of Contents.....	2
1 Getting Started.....	7
<a href="#">1.1 Layout.....</a>	<a href="#">7</a>
<a href="#">1.2 Touch Screen.....</a>	<a href="#">8</a>
<a href="#">1.3 Power On/Off Function .....</a>	<a href="#">8</a>
<a href="#">1.4 Sleep Button.....</a>	<a href="#">8</a>
<a href="#">1.5 System Requirements.....</a>	<a href="#">8</a>
<a href="#">1.6 Charging</a>	
.....	<a href="#">9</a>
<a href="#">1.7 Cleaning.....</a>	<a href="#">9</a>
<a href="#">1.8 Registering Your Golf Guru.....</a>	<a href="#">9</a>
<a href="#">1.9 Download the Guru Utility to your Computer .....</a>	<a href="#">9</a>
<a href="#">1.10 Starting Application Guru .....</a>	<a href="#">9</a>
<a href="#">1.11 Programs Screen.....</a>	<a href="#">10</a>
<a href="#">1.12 Music Player.....</a>	<a href="#">10</a>
<a href="#">1.13 Movie Player.....</a>	<a href="#">11</a>
<a href="#">1.14 Photo Viewer.....</a>	<a href="#">11</a>
<a href="#">1.15 E-Book Viewer.....</a>	<a href="#">11</a>
<a href="#">1.16 Settings.....</a>	<a href="#">12</a>
2 Overview - Downloading Course Maps to Your Golf Guru.....	13
<a href="#">2.1 Searching for Courses.....</a>	<a href="#">13</a>
<a href="#">2.2 AerVu Course Maps and Standard Course Maps.....</a>	<a href="#">14</a>
<a href="#">2.3 Requesting Courses to be Mapped.....</a>	<a href="#">15</a>
3 Playing Golf with Your Guru.....	16
<a href="#">1.17 GPS Golf Guru Version Screen.....</a>	<a href="#">16</a>
<a href="#">1.18 On-Screen Indicators</a>	
.....	<a href="#">16</a>
<a href="#">1.19 Acquiring Signals and to Begin Playing.....</a>	<a href="#">17</a>
<a href="#">1.20 Selecting a Course to Play.....</a>	<a href="#">17</a>
<a href="#">1.21 Hole Selection.....</a>	<a href="#">17</a>
<a href="#">1.22 Tee Selection.....</a>	<a href="#">17</a>

1.23	<a href="#">AerVu Screen.....</a>	<a href="#">17</a>
1.24	<a href="#">Distance Views.....</a>	<a href="#">17</a>
1.24.1	<a href="#">Target View.....</a>	<a href="#">18</a>
1.24.2	<a href="#">Smart Green View.....</a>	<a href="#">18</a>
1.24.3	<a href="#">Big Text View.....</a>	<a href="#">18</a>
4	<a href="#">Keeping Score and Statistics with the Golf Guru.....</a>	<a href="#">19</a>
1.25	<a href="#">Scoring Entry .....</a>	<a href="#">19</a>
1.26	<a href="#">Scoring Screen.....</a>	<a href="#">20</a>
1.27	<a href="#">Capturing Golf Statistics.....</a>	<a href="#">20</a>
5	<a href="#">Customizing the Golf Guru for Play.....</a>	<a href="#">21</a>
1.28	<a href="#">Customizing Golf Settings.....</a>	<a href="#">21</a>
	<a href="#">.....</a>	<a href="#">21</a>
	<a href="#">.....</a>	<a href="#">21</a>
	<a href="#">.....</a>	<a href="#">21</a>
	<a href="#">.....</a>	<a href="#">21</a>
1.28.1	<a href="#">Time .....</a>	<a href="#">21</a>
1.28.2	<a href="#">Scoring On.....</a>	<a href="#">21</a>
1.28.3	<a href="#">Statistics On .....</a>	<a href="#">21</a>
1.28.4	<a href="#">Advance Statistics On .....</a>	<a href="#">22</a>
1.28.5	<a href="#">Adv Mode.....</a>	<a href="#">22</a>
1.28.6	<a href="#">Auto Delay.....</a>	<a href="#">22</a>
1.28.7	<a href="#">Dist Mode .....</a>	<a href="#">22</a>
1.28.8	<a href="#">Buttons .....</a>	<a href="#">22</a>
1.29	<a href="#">Determining Shot Distance.....</a>	<a href="#">23</a>
6	<a href="#">Mapping Your Own Course.....</a>	<a href="#">24</a>
1.30	<a href="#">Creating and Naming Your Own Golf Course Map.....</a>	<a href="#">24</a>
1.31	<a href="#">Adding Targets to Your Map.....</a>	<a href="#">25</a>
1.32	<a href="#">Mapping Greens.....</a>	<a href="#">26</a>
1.33	<a href="#">Changing the Par.....</a>	<a href="#">27</a>
1.34	<a href="#">Changing the Hole Number.....</a>	<a href="#">27</a>
1.35	<a href="#">How to Save Your Map.....</a>	<a href="#">27</a>
1.36	<a href="#">Modifying User Mapped Golf Courses.....</a>	<a href="#">27</a>
1.37	<a href="#">Deleting Targets.....</a>	<a href="#">29</a>
1.38	<a href="#">Renaming Your Course.....</a>	<a href="#">29</a>

7	Editing a Pre-Mapped Downloaded Course.....	31
	<a href="#"><u>1.39 Adding Targets.....</u></a>	<a href="#"><u>31</u></a>
8	How to Upload and View Your Played Rounds.....	33
	<a href="#"><u>1.40 How to View Your Rounds via Your Computer.....</u></a>	<a href="#"><u>33</u></a>
9	Golf Guru Application Menu Items.....	34
	<a href="#"><u>1.41 Help.....</u></a>	<a href="#"><u>34</u></a>
	<a href="#"><u>1.42 Hole Selection.....</u></a>	<a href="#"><u>34</u></a>
	<a href="#"><u>1.43 Map Golf Course.....</u></a>	<a href="#"><u>35</u></a>
	<a href="#"><u>1.44 GPS Status.....</u></a>	<a href="#"><u>35</u></a>
	<a href="#"><u>1.45 Settings.....</u></a>	<a href="#"><u>35</u></a>
	<a href="#"><u>1.46 File Management.....</u></a>	<a href="#"><u>35</u></a>
	<a href="#"><u>1.47 About.....</u></a>	<a href="#"><u>35</u></a>
10	Helpful Hints .....	36
11	Upgrading Your Guru Software.....	37
	<a href="#"><u>1.48 Install New Guru Utility.....</u></a>	<a href="#"><u>37</u></a>
12	Shot Distance Table.....	38
13	Contact Information.....	39

.....	1
User Manual for GURU 4.....	1
.....	1
Table of Contents.....	2
1 Getting Started.....	7
<a href="#"><u>1.1 Layout.....</u></a>	<a href="#"><u>7</u></a>
<a href="#"><u>1.2 Touch Screen.....</u></a>	<a href="#"><u>8</u></a>
<a href="#"><u>1.3 Power On/Off Function .....</u></a>	<a href="#"><u>8</u></a>

1.4 Sleep Button.....	8
1.5 System Requirements.....	8
1.6 Charging	
.....	9
1.7 Cleaning.....	9
1.8 Registering Your Golf Guru.....	9
1.9 Download the Guru Utility to your Computer .....	9
1.10 Starting Application Guru .....	9
1.11 Programs Screen.....	10
1.12 Music Player.....	10
1.13 Movie Player.....	11
1.14 Photo Viewer.....	11
1.15 E-Book Viewer.....	11
1.16 Settings.....	12
2 Overview - Downloading Course Maps to Your Golf Guru.....	13
2.1 Searching for Courses.....	13
2.2 AerVu Course Maps and Standard Course Maps.....	14
2.3 Requesting Courses to be Mapped.....	15
3 Playing Golf with Your Guru.....	16
1.17 GPS Golf Guru Version Screen.....	16
1.18 On-Screen Indicators	
.....	16
1.19 Acquiring Signals and to Begin Playing.....	17
1.20 Selecting a Course to Play.....	17
1.21 Hole Selection.....	17
1.22 Tee Selection.....	17
1.23 AerVu Screen.....	17
1.24 Distance Views.....	17
1.24.1 Target View.....	18
1.24.2 Smart Green View.....	18
1.24.3 Big Text View.....	18
4 Keeping Score and Statistics with the Golf Guru.....	19
1.25 Scoring Entry .....	19
1.26 Scoring Screen.....	20

	<a href="#">1.27 Capturing Golf Statistics.....</a>	<a href="#">20</a>
5	<a href="#">Customizing the Golf Guru for Play.....</a>	<a href="#">21</a>
	<a href="#">1.28 Customizing Golf Settings.....</a>	<a href="#">21</a>
	<a href="#">.....</a>	<a href="#">21</a>
	<a href="#">.....</a>	<a href="#">21</a>
	<a href="#">.....</a>	<a href="#">21</a>
	<a href="#">.....</a>	<a href="#">21</a>
	<a href="#">1.28.1 Time .....</a>	<a href="#">21</a>
	<a href="#">1.28.2 Scoring On.....</a>	<a href="#">21</a>
	<a href="#">1.28.3 Statistics On .....</a>	<a href="#">21</a>
	<a href="#">1.28.4 Advance Statistics On .....</a>	<a href="#">22</a>
	<a href="#">1.28.5 Adv Mode.....</a>	<a href="#">22</a>
	<a href="#">1.28.6 Auto Delay.....</a>	<a href="#">22</a>
	<a href="#">1.28.7 Dist Mode .....</a>	<a href="#">22</a>
	<a href="#">1.28.8 Buttons .....</a>	<a href="#">22</a>
	<a href="#">1.29 Determining Shot Distance.....</a>	<a href="#">23</a>
6	<a href="#">Mapping Your Own Course.....</a>	<a href="#">24</a>
	<a href="#">1.30 Creating and Naming Your Own Golf Course Map.....</a>	<a href="#">24</a>
	<a href="#">1.31 Adding Targets to Your Map.....</a>	<a href="#">25</a>
	<a href="#">1.32 Mapping Greens.....</a>	<a href="#">26</a>
	<a href="#">1.33 Changing the Par.....</a>	<a href="#">27</a>
	<a href="#">1.34 Changing the Hole Number.....</a>	<a href="#">27</a>
	<a href="#">1.35 How to Save Your Map.....</a>	<a href="#">27</a>
	<a href="#">1.36 Modifying User Mapped Golf Courses.....</a>	<a href="#">27</a>
	<a href="#">1.37 Deleting Targets.....</a>	<a href="#">29</a>
	<a href="#">1.38 Renaming Your Course.....</a>	<a href="#">29</a>
7	<a href="#">Editing a Pre-Mapped Downloaded Course.....</a>	<a href="#">31</a>
	<a href="#">1.39 Adding Targets.....</a>	<a href="#">31</a>
8	<a href="#">How to Upload and View Your Played Rounds.....</a>	<a href="#">33</a>
	<a href="#">1.40 How to View Your Rounds via Your Computer.....</a>	<a href="#">33</a>
9	<a href="#">Golf Guru Application Menu Items.....</a>	<a href="#">34</a>
	<a href="#">1.41 Help.....</a>	<a href="#">34</a>
	<a href="#">1.42 Hole Selection.....</a>	<a href="#">34</a>
	<a href="#">1.43 Map Golf Course.....</a>	<a href="#">35</a>

<a href="#">1.44 GPS Status.....</a>	<a href="#">35</a>
<a href="#">1.45 Settings.....</a>	<a href="#">35</a>
<a href="#">1.46 File Management.....</a>	<a href="#">35</a>
<a href="#">1.47 About.....</a>	<a href="#">35</a>
10 Helpful Hints .....	36
11 Upgrading Your Guru Software.....	37
<a href="#">1.48 Install New Guru Utility.....</a>	<a href="#">37</a>
12 Shot Distance Table.....	38
13 Contact Information.....	39


# 1

Thank you for your purchase of the Golf Guru 4! Its GPS range finding and game statistics recording will elevate your golf experience to new heights. If you have any questions concerning your Golf Guru, contact the Golf Guru Team.

Email: [support@on-pin.com](mailto:support@on-pin.com)

## 1 Getting Started

### 1.1 Layout

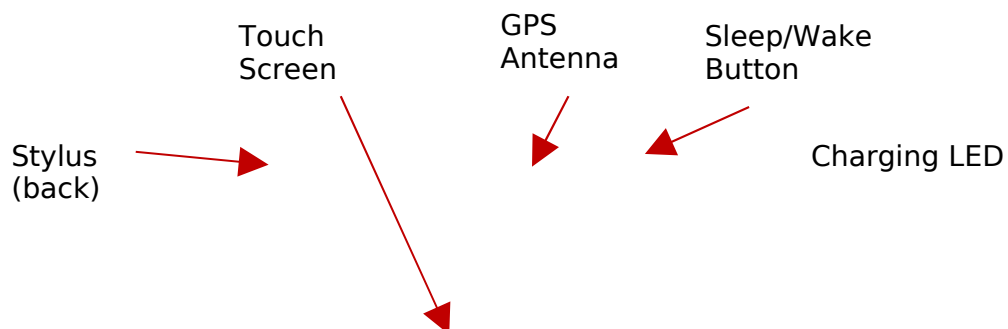



## **1.2 Touch Screen**

The Guru 4 provides a touch screen interface. To operate the buttons on the screen, simply touch them with your finger or with the provided stylus. At times you will be able to move an object, for example a flag, to a new location on the screen.

## **1.3 Power On/Off Function**

To turn unit on, move switch on the back of the guru, bottom right hand side, from off to on.

## **1.4 Sleep Button**

The sleep button is located on the top of the guru, right hand side. To put Guru 4 in and out of the sleep mode, depress button for two seconds.

## **1.5 System Requirements**

- PC or laptop with Microsoft Windows 2000, XP, Vista, Vista 64BIT or Windows 7
- Internet access
- Available USB port
- 4MB of hard disk space
- 256 MB of RAM

## 1.6 Charging

The Guru 4 must be charged using the provided wall charger or the Guru 4 car charger. **The Guru 4 cannot be charged using a USB cable and computer USB port.** It is recommended you obtain a full charge prior first use. The estimated time to obtain a full charge is 4 - 7 hours. Please turn the guru in the off position before charging.

## 1.7 Cleaning

To clean the Guru, unplug all cables and turn off unit. Then use a soft, slightly damp, lint-free cloth. Avoid getting moisture in the openings. Don't use window cleaners, household cleaners, aerosol sprays, solvents, alcohol, ammonia, or abrasives to clean Guru.


## 1.8 Registering Your Golf Guru

Please refer to the detailed instructions on our website at <http://onpin.gpsgolfguru.com/getting-started.html>

## 1.9 Download the Guru Utility to your Computer

Please refer to the detailed instructions on our website at <http://onpin.gpsgolfguru.com/getting-started.html>

## 1.10 Starting Application Guru

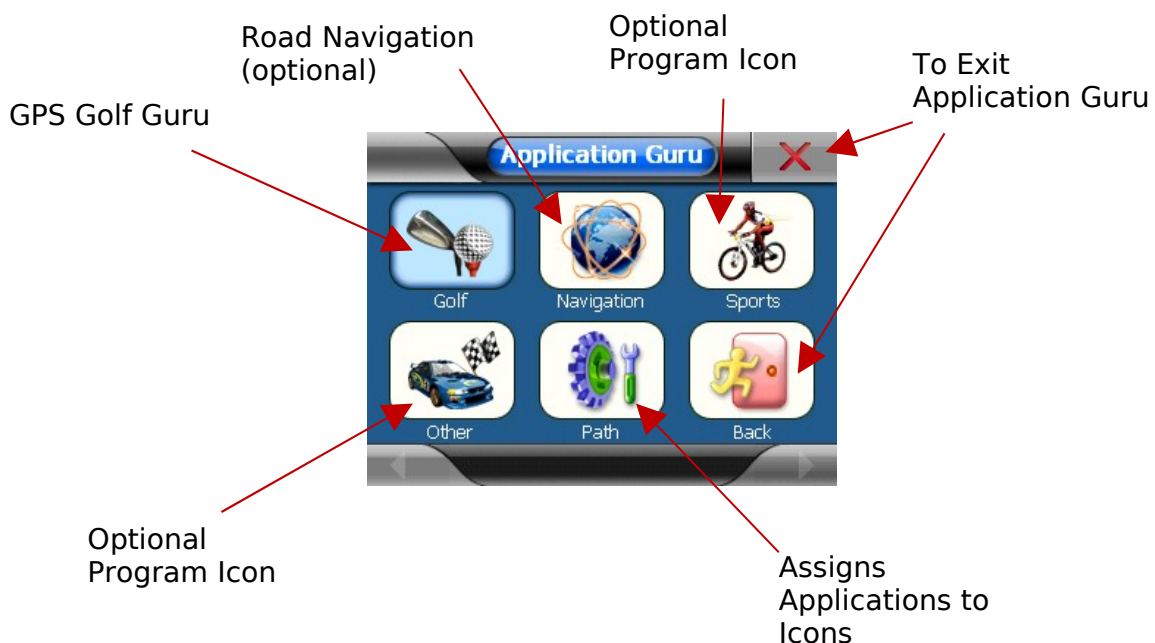

From this starting screen, Application Guru, press the “Golf” icon to access the GPS Golf Guru Application. Optional Road Navigation can be accessed from this screen along with other programs.

### 1.11 Programs Screen




From the programs screen you can launch the Music Player, Movie Player, Photo Viewer, E-Book Viewer and the Guru 4 Settings Manager.

### 1.12 Music Player




Use the Music Player to listen to music (wma, mp3 or wav) through headphones (not included) or the internal speaker. The buttons on the left and right side of the display control operation of the Music Player.

### **1.13 Movie Player**

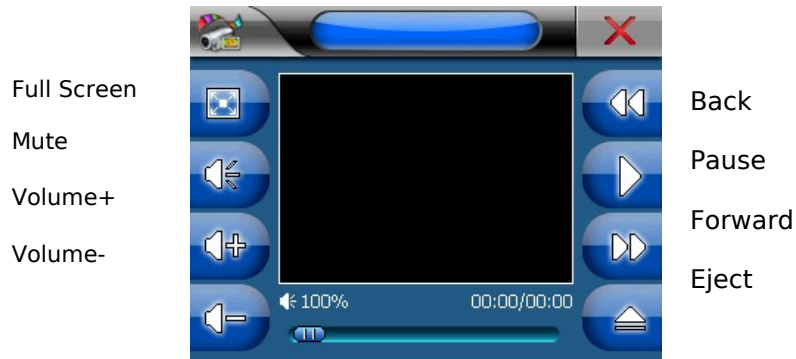


Use the Movie Player to view movies (avi, asf and wmv). The buttons on the left and right side of the display control operation of the Movie Player.

### **1.14 Photo Viewer**

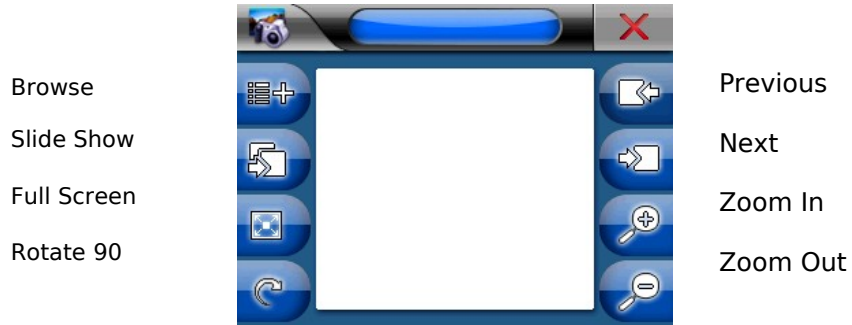

Use the Photo Viewer to view photos (jpg, bmp, gif and png). The buttons on the left and right side of the display control operation of the Photo Viewer. The Photo Viewer can be configured to operate as an electronic photo frame.

### **1.15 E-Book Viewer**

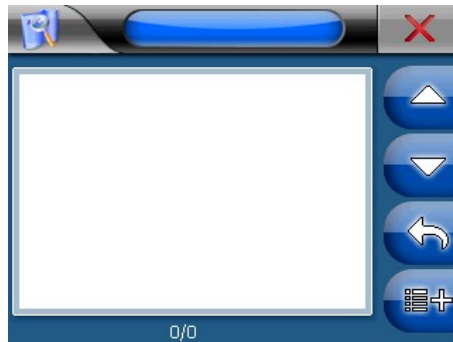

- Page Up
- Page Down
- Go to Line
- Browse

Use the EBook Viewer to view text documents. The buttons on the right side of the display control operation of the EBook Viewer.

## 1.16 Settings



Use the left/right arrows at the lower part of the screen to scroll through the settings icons.

- **GPS Status** View information about the operation of the built-in GPS receiver.
- **Time** For initial set up of time, first set your time zone then set the time and date.
- **Backlight** Adjusts the brightness of the backlight. For maximum battery life, set brightness level to lowest setting.
- **Volume** Set the volume level of the speaker.
- **System** View information about your Guru such as Guru ID, version, available RAM, and available flash amounts.

## 2 Overview - Downloading Course Maps to Your Golf Guru

- ❖ log in to website
- ❖ select courses you would like to download
- ❖ connect usb cable to computer
- ❖ connect guru to usb cable
- ❖ open guru utility from your desktop
- ❖ enter email and password to access server
- ❖ press sync button on guru utility

### 2.1 Searching for Courses

Go to - <http://onpin.gpsgolfguru.com> and log on using your user name and password. Click on the search tab. **Be sure that if you have more than one guru, you have the guru ID selected for the one that you would like to add courses to.**

Search Types   Find A Course   **Map Style Search**   Site Search

47FE75DD FEAEFDD5 4ECC4077

Can't find the course you're looking for? [Click here to request a course map.](#)

Country:   State/Province:   City:   Name:   SEARCH

United States   Pennsylvania   Any..

Click on the find a course tab. Select the country, state/province, and city. A list of courses will appear.

HINT: If you are having trouble locating the course, try entering the country and state/province, then begin typing the name of the course.

## 2.2 AerVu Course Maps and Standard Course Maps

The Guru4 has the capabilities of utilizing AerVu maps (fee associated) and standard maps (free). Each purchase of the Guru4 includes two free AerVu map credits. Additional credits can be purchased on our website.

Symbols for Maps:



Green Plus Sign - Click to add this standard map to your Guru


Red Minus Sign - Click to remove this standard map from your Guru

Blue Dollar Sign - Click to buy an AerVu map for this course (course is available now)

Blue Check Mark - You have already purchased this AerVu course

Blue Question Mark - Click to request and to pay for this AerVu course

When selecting courses to download to the Guru 4, a screen similar to the one below will appear:

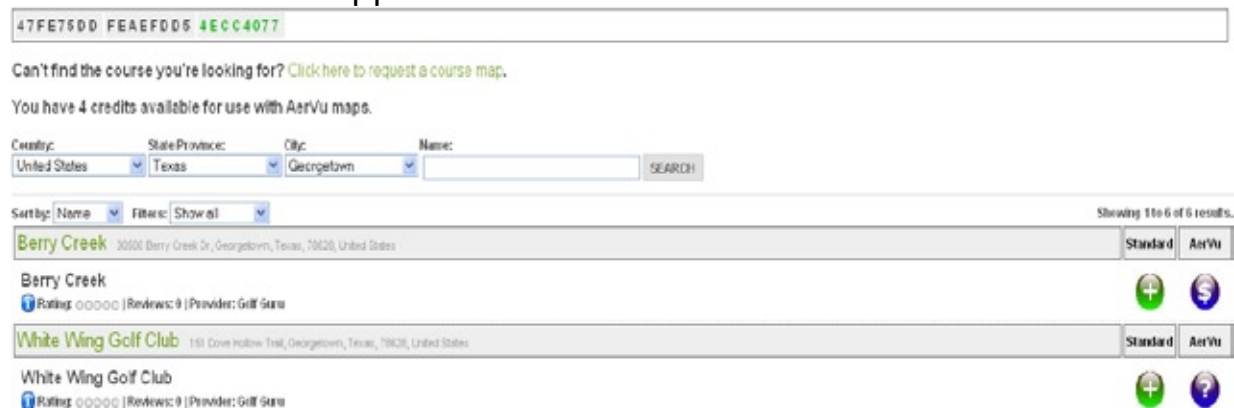

On the screen above, you will see how many AerVu credits you have available. To add a standard course, click on the green plus sign. To remove a standard course from your guru, click on the red minus sign. Courses that have an AerVu map will have a blue dollar sign; courses that don't have an AerVu course mapped currently will have a blue question mark. AerVu courses can be purchased by clicking on either of the blue icons. If you select an AerVu course with a blue question mark, you will need to confirm that you would like to purchase this

course and that you are requesting this course be mapped. The turn-around time for mapping an AerVu course is one to two weeks.

HINT: If you have more than one guru on your account, please be sure to have the Guru4 selected in order to view AerVu credits available, etc.


### ***2.3 Requesting Courses to be Mapped***

To request a course be mapped, click on the “click here to request a course map” on the find a course page or on the map style search page. If you would like to request an AerVu course map that is not listed, you must first request a standard map.

# 3

## 3 Playing Golf with Your Guru

### 1.17 GPS Golf Guru Version Screen

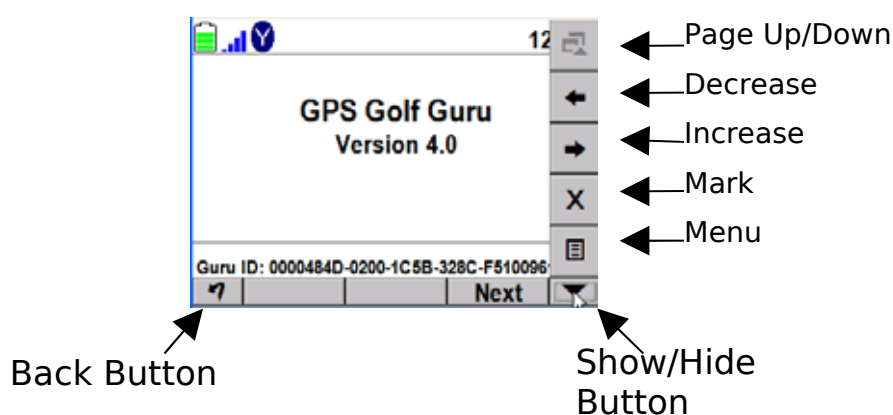

### 1.18 On-Screen Indicators



From left to right, Battery, Satellite, Type of Measurement (meters or yards) Hole #, Par, and Clock.

**BATTERY LEVEL** - The Battery indicator represents charge measurement by the filling of a "battery" rendering. When the charging is full, the indicator will be four bars.

**SATELLITE SIGNAL LEVEL** - The Signal Strength indicator uses four bars to communicate satellite signal strength.

**Note:** Signal strength under a roof or a cover of some sort is typically weak. Please move out from undercover, and the signal strength will greatly improve.

**HOLE NUMBER** - This indicator, located at the Status Bar's center, communicates two pieces of information; current golf course hole being played, and par of that particular hole.

**CLOCK** - This indicator, located at the status bar's right, tells the current time.

### **1.19 Acquiring Signals and to Begin Playing**

**Note:** You must be within range less than 999 yards away from the course) and have at least 2 bars of satellite to get correct yardages! Stand outside prior to playing.

**Note:** It is recommended that the Golf Guru is fully charged prior to the beginning a golf game. The Golf Guru will display 2 bars in the signal meter when the unit is ready to be used.

### **1.20 Selecting a Course to Play**

**STEP 1:** Once the Golf Guru is powered on, the Application Screen will appear. Tap on the "Golf" icon to access the GPS Golf Guru Application. Tap on the "Next" button at the bottom right hand of the screen.

**STEP 2:** The "Guru Course List" will then display. This list provides all the current courses that you have downloaded onto the Golf Guru from our website. Select Course desired by touching the course name so highlighted in blue, then touch "select" on the bottom right hand of the guru screen.

**STEP 3:** The selected golf course will appear on the screen in a large font along with the course's phone number and address. To start a golf game, press the word "Play". The "Hole Selection" screen will display.

### **1.21 Hole Selection**

Press the Hole #, use Increase/Decrease to change hole. Tap Tee to select the tee position. *Note: You can set the Guru 4 to automatically advance to the next hole in the Settings Menu.*

### **1.22 Tee Selection**

Tap Tee to select the tee position.

### **1.23 AerVu Screen**

The AerVu screen allows you to move the Shot Plan Marker (yellow rectangle) anywhere on the hole to give you distance to that position as well as the remaining distance to the center of the green or pin. Red markers show the mapped features of the hole.

### **1.24 Distance Views**

The Golf Guru provides the golfer with 3 "Distance View" screens to assist in providing yardage information about the golf course.

### **Three “Distance View” Screens:**

- **Target View** – Refer to Section 3.8.1 for more information
- **Big Text View** – Refer to Section 3.8.3 for more information
- **Smart Green View** – Refer to Section 3.8.2 for more information

To display the three distance view screen, press view button at the bottom of the screen. Pressing the view button will enable you to switch between the different views.

#### **1.24.1 Target View**

The “Target Distance View” screen displays yardages to the center of the green, along with additional key target yardage information. The additional target yardage information varies based on each course’s hole.

*(Refer to Section 5.2 to learn how to determine your shot distance.)*

#### **1.24.2 Smart Green View**

The Smart Green “Distance Views” screen displays yardage to the center, near, and far points of the green relative to your position on the fairway, or rough. The rendering of the green provided is drawn approximately to the shape of the green.

The square at the top of the rendering tells the golfer where the green’s furthest point is located with its measurement to the left. The triangle at the bottom indicates where the nearest point of the green is located.

The center yardage displayed on the screen is also the yardage to the “Pin” or flag. To move the pin/flag, simply touch and drag. As the pin/flag is moved around, the center yardage measurement changes to compensate.

*(Refer to Section 5.2 to learn how to determine your shot distance.)*

#### **1.24.3 Big Text View**

The “Big Text Distance Views”, screen provides the same information as the “Target View Screen” using larger fonts. *(Refer to Section 5.2 to learn how to determine your shot distance.)*

# 4

## 4 Keeping Score and Statistics with the Golf Guru

The scoring feature allows the golfer to keep score while playing a game. The scoring function is turned *off* when delivered to the customer.

There are two methods to turn on the scoring function:

- **Through Any “Distance View” screen:** To access the scoring feature, press the “Scoring” Button while in any “Distance View” screen. To turn the scoring feature on, users need to answer “Yes” to the question that displays. Another question will ask if the golfer wants the “Statistics Collection Feature” to be turned on. (Refer to Section 4.3 to learn about the “Statistics Collection Feature”.)
- **Through the Main Menu:** The scoring feature can also be activated by accessing the “Main Menu” by pushing the “Menu” button with the show/hide button. Press “Settings” then “Select”. Press Scoring On, and select yes.

### 1.25 Scoring Entry

When the scoring function is turned on, and a hole is completed, the method in which the Golf Guru displays the scoring screen depends on how the “Adv Mode” is set in the Settings menu.

- **AUTO ADV MODE:** The scoring screen will automatically appear before the Golf Guru changes to another hole.
- **PROMPT ADV MODE:** A prompt will appear after a hole is completed asking if the golfer wants to “Proceed to the Next Hole”. If “Yes” is selected, the scoring screen will appear to allow for the score to be entered.
- **MANUAL ADV MODE:** While in any “Distance View” screen, manually press the Score Button at the end of the hole to reveal the “Scoring” screen.

*(Refer to Section 5.1 to learn how to change the settings.)*

## **1.26 Scoring Screen**

To record your score after playing a hole, press “Score” Button, enter your strokes, then press the “Save” Button.

Other Functions on the Scoring Screen:

- **STATS Button** - View stats through your current position on the golf course. If the *STAT Middle Button* does not appear, then the statistics collection function is turned off. *(Refer to Section 5 to learn how to turn on the statistics collection function.)*
- **CARD Button** - View the scorecard for your golf game.

**Note:** You cannot enter or adjust your score while in the “Scorecard” screen.

## **1.27 Capturing Golf Statistics**

The Golf Guru comes with added features that allow you to keep golf statistics such as Putts per Hole, Greens in Regulation (GIR), Fairways in Regulation (FIR), Chips, Bunkers, Penalty Strokes, and Concentration Level.

How to Turn On the Statistics Collection Function:

To turn on Statistics Collection Feature, go to Menu, Press Settings and turn Statistics On to “Yes”. To turn on Advanced Statistics Features, go to Menu, Press Settings and turn Adv Stats On to “Yes”.

**Note:** The scoring feature must be turn on to enable the statistics feature.

### ***Entering Number of Putts into the Golf Guru:***

When the statistics collection feature is on, the “Putts” field will display on the “Scoring” screen. If the “Putts” field is not displayed, then turn on the “Statistics Collection” function *(refer above to learn to turn on the statistics)*.

# 5

## 5 Customizing the Golf Guru for Play


### 1.28 Customizing Golf Settings

The following settings can be customized on the Golf Guru from the “Settings Screen”, “Scoring on/off”, “Statistics On/Off”, “Advance Stats” On/Off, “Advance Mode”, and “Auto Delay”.

#### **How to Access the “Settings Screen”:**

STEP 1: Press the “Show/Hide” button, then the “Menu” button on the Golf Guru to get to the “Main Menu” page.

STEP 2: Tap “Settings” option, and press “Select”. (Refer to the below sub-sections below to learn how to change the settings from “Settings Screen”.) Once to Setting screen is displayed tap the item to change then press the “Show/Hide button and use Increase/Decrease to change the values of the items selected.

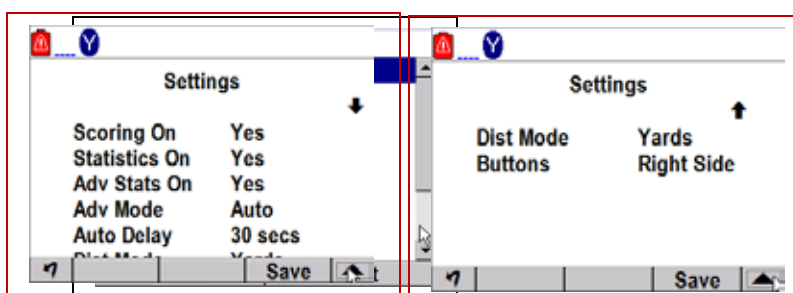

#### **1.28.1 Time**

Adjust the time using hardware settings.

#### **1.28.2 Scoring On**

If Yes, allows you to enter strokes.

#### **1.28.3 Statistics On**

If Yes, allows you to enter putts, FIR (fairway in regulation) and GIR (green in regulation).

### **1.28.4 Advance Statistics On**

If Yes, allows you to enter miss FIR left or right, and miss GIR left or right, short or long; number of bunker, chip and penalty strokes plus adding if there was poor concentration on the hole.

### **1.28.5 Adv Mode**

Adjust how the Golf Guru advances to the next The Advance Modes are as follows:

- Auto: The Golf Guru changes holes at 40 yards from the green after a delay set by "Auto Delay".
- Prompt: From 40 yards of the green, it prompts you after a delay set by "Auto Delay" and gives the option to change holes ("Yes") or to return to the current hole's "Distance Views" screen ("No").
- Manual: This requires you to manually change the holes. Press "Hole" key from any "Distance Views" screen, and select the next hole. Play continues when the "Play" is pressed.

### **1.28.6 Auto Delay**

The "Auto" and "Prompt" options in the Advance Modes require that a time delay be set.

How to Set the Time Delay:

STEP 1: From the "Settings Screen", tap Auto Delay.

STEP 2: Select the time of the "Auto" or "Prompt" delay by using the increase button to choose between the "30", "60" or "90" second options.

STEP 3: Press the "Save" Key to save the new setting.  
(Refer to Section 6.1.x to learn how to turn on the Scoring and Statistics functions.)

### **1.28.7 Dist Mode**

This is where you can select for the Guru to measure in Yards or Meters.

### **1.28.8 Buttons**

You can select to have the Buttons on left or right side of screen.

## **1.29 Determining Shot Distance**

Follow These Steps to Calculate Your Shot Distance While in Any “Distance Views” Screen: You can display the “Mark” button by pressing Show/Hide button .

STEP 1: While in any “Distance Views” screen, press the “Mark” button at the location of the tee-off shot. Once pressed, the screen will display the statement: “Mark not set.

STEP 2: Press the “Mark” button again, and make your shot. At this point, the shot’s starting location has been recorded. The “To Mark:” heading will appear at the bottom right of the screen. As the golfer walks away from the marked shot’s location, the “To Mark:” yardage tells how far the golfer is from the recorded spot.

STEP 3: Once the golfer has located their ball, the Golf Guru needs to be positioned over it. Press the “Mark” button to complete the shot distance determination. The screen will then display the yardage of the shot. Note: If the golfer pressed the “Mark” button in error, simply press the “Back” button to return to marking your shot.

STEP 4: You can now hit your next shot and repeat step 3. Note: you can quit marking at any point the Guru 4 will reset at the next hole. You can then start the process again.

# 6

## 6 Mapping Your Own Course

When mapping your own course, the Guru allows:

- 30 targets points per hole- Modifications
- Targets/Hazards - Mapping Greens-
- Naming your course - Changing the Par
- Measuring in Meters or Yards

### **1.30 Creating and Naming Your Own Golf Course Map**

(Note: User must be at location to use mapping)

STEP 1: Press Show/Hide button and then press "Menu" button.


STEP 2: Tap "Map Golf Course" and press Select button.

STEP 3: Press "Course" Button.

STEP 4: Tap "Create Course" and press "Select".



STEP 5: Push "OK".

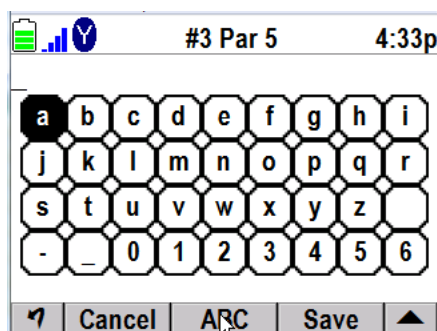
STEP 6: Tap the letters to spell your facility. You can change upper and lower case by pressing "ABC/abc".



STEP 7: When you are finished entering in the name, press "Save".


## 1.31 Adding Targets to Your Map

STEP 1: Tap Hole # or Par to change with  increase  decrease button then press "Target".

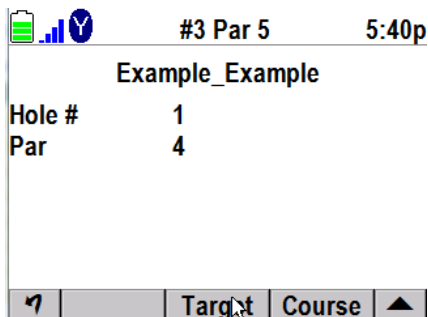




STEP 2: Press the "Target" button to add a target, then press "Select" button.


STEP 3: This screen will appear with the word "Green" next to "Type" on your screen. Tap "Type" to choose your target options.

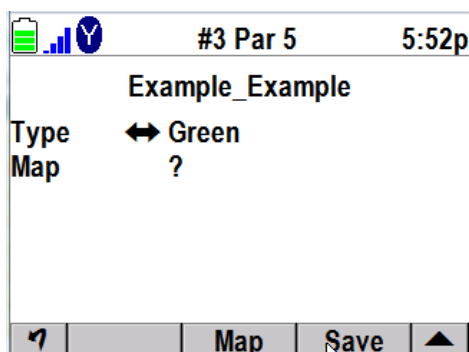

STEP 4: Scroll to your choice of target by pressing and dragging the scroll bar and then Tap your target type and then press "Select".

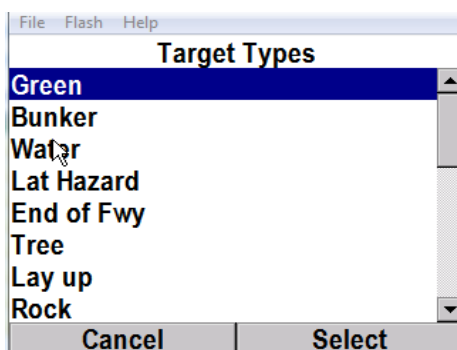

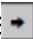STEP 5: Tap "Location". Then use  increase  decrease button to select if the target is on the Left, Center, or Right of the fairway. Note: User may use order if there were targets close together and user wanted to indicate the 1<sup>st</sup>, 2<sup>nd</sup> and 3<sup>rd</sup> target. Order is generally not used.

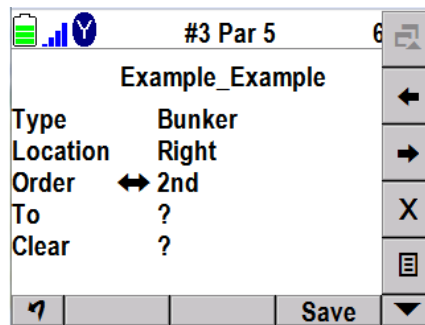

STEP 6: Tap “To” or “Clear” for your target and push the “Mark” button when you are at the proper location on the fairway to select your choice.

STEP 7: Press “Save” to save your work.

### **1.32 Mapping Greens**

The Golf Guru is the only handheld GPS device that allows the golfer to create an actual green outline, instead of only being able to mark the green’s front, center, and back locations.

STEP 1: Press the “Target” button when in mapping.

STEP 2: Make sure your screen says “Green” next to “Type”. Press the “Map” button...

STEP 3: Stand on the edge of the green where the FAIRWAY MEETS THE GREEN. You are going to walk around the shape of the green, outlining it. Press the “Start” button, and begin slowly walking around the green!

STEP 4: A line will appear slowly forming the shape of the green as you walk. When you get about 2 yards from where you started, press the “Stop” button.

**Note:** If you mess up, push the “Clear button and try it again.

STEP 5: If you are satisfied with the green push the “Save” button.

**Note:** This works best when there are 3 or more bars of signal.

STEP 6: Press the “Save” button again.

**Note:** The green must be mapped for the hole to be valid and fully finished. A hole will not display without a green mapped. Any hole missing a green will prevent subsequent holes from being displayed.

### 1.33 Changing the Par

STEP 1: Tap Par and use “Increase” button or “Decrease” button.

### 1.34 Changing the Hole Number

STEP 1: Tap Hole # and use “Increase” button or “Decrease” button.

### 1.35 How to Save Your Map

STEP 1: When you are finished mapping all the holes on your course, press “Course”.

STEP 2: Tap “Save Course” and press “Select” button.


STEP 3: Press “OK” button to fully save your work.

### 1.36 Modifying User Mapped Golf Courses

You can modify any mapped golf course by completing the following steps:


STEP 1: Press Show/Hide button and press “Menu” button.

STEP 2: Tap “Map Golf Course”. And press “Select”.

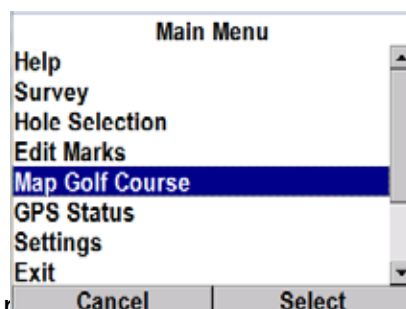


STEP 3: Press “Course”

STEP 4: Tap “Load Courses”, and press “Select” button

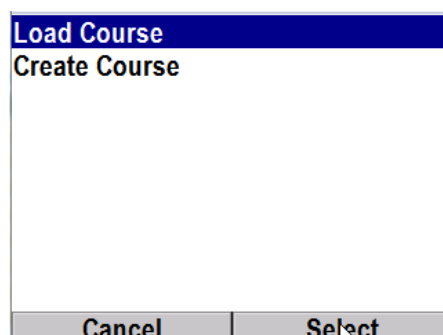

STEP 5: Press and scroll down the screen and Tap the course to be modified, and then press the “Select” button.

STEP 6: Press the “Target” button.

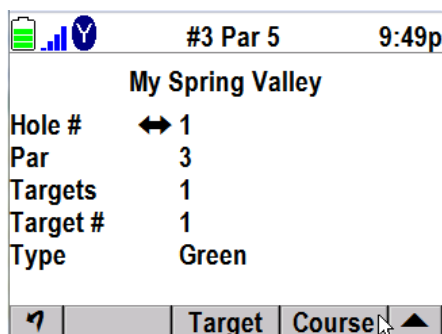


STEP 7: Tap on “Modify Target”, and press the “Select” button.

STEP 8: Tap Type twice or “Increase” button to select target type to modify.

STEP 9: Scroll down to your choice of target and Tap; then press the “Select” button.

STEP 10: Tap “Location” and use “Increase” button to select location of target; Left, Center, or Right.

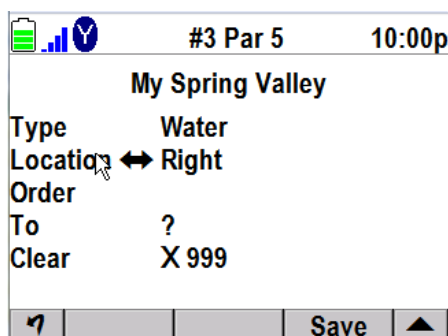

STEP 11: Tap “To” when you are at the “To” location and press “Mark” button down when you get to the Clear location tap “Clear” and then press the “Mark” button, if you need to change that as well. A check mark will appear.

STEP 12: Press the “Save” button. This will take you back the beginning screen where you can modify as many more targets as you need to.

### **1.37 Deleting Targets**

STEP 1: Push the “Menu” button, and Tap “Map Golf Course”.


STEP 2: Press “Select” button.

STEP 3: Press “Course” button.

STEP 4: Tap Load Course and press “Select’ button.

STEP 5: Scroll down and Tap course to be modified, and press “Select” button.

STEP 6: Press “Target” button.

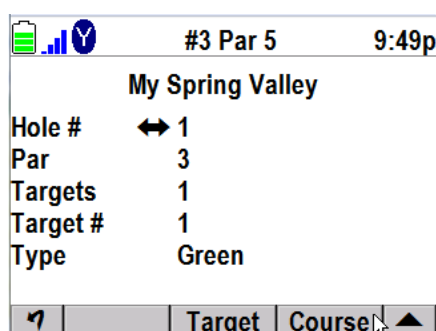

STEP 7: Tap “Delete Target”, and press “Select” button.

STEP 8: Press “yes” button to delete selected target.

### **1.38 Renaming Your Course**

If the facility name changes, or just want to rename your course for whatever reason, you can do so by following the below steps.

STEP 1: Push the “Menu” button, and Tap “Map Golf Course” and press “Select”.

STEP 2: Press “Course” button.


STEP 4: Tap “Load Course”, and press “Select”.

STEP 5: Scroll down and Tap the course to be modified, and press the “select Button”.

STEP 6: Press “Course” button and Tap “Rename Course” and press “Select” button.

STEP 7: Type in the new desired name for your course by typing out the new name and press the “Save” button when done.

STEP 8: Press "OK" button to confirm...

**NOTE:** If you make a spelling mistake or want to erase what you just typed in, please  press the "Back" button to do so.

# 7

## 7 Editing a Pre-Mapped Downloaded Course

You can edit pre-mapped downloaded courses.

### 1.39 Adding Targets

To edit a pre-mapped course, you are going to go through the same steps as you would for mapping a course from scratch

**Step 1:** Hit the “Menu” button on your Guru.


**Step 2:** Tap “Map Golf Course” and press “Select” button. Then press “Course” button.

**Step 3:** Tap “Load Course” and press “Select” button.


**Step 4:** Scroll down to the course you wish to edit and Tap Course Name then press the “Select” button.


**Step 5:** Press the “Target” button.

**Step 6:** The Guru will give you one option, which is to add a target. Press the “Select” button.

**Step 7:** An arrow will be in between the words “Type” and “Green”. Press the “Increase” button .

**Step 8:** You will now be on the Target Types screen. Scroll down to the target of your choice and Tap, and then press the “Select’ button.

**Step 9:** Use the “Increase” button  to choose the “Location” of the target.

**Step 10:** Tap “Order”, and press “Increase” button  to choose the number order of the “Target”. (Note: This is optional. You do not have to choose a number order if you don’t want to.)

**Step 11:** Tap “To” or “Clear”.



**Step 12:** Press the “Mark” button when you are at the correct position to mark your selection. (Note: You can select both options if you wish!)

**Step 13:** Press the “Save” button to save that target edit.

**Step 14:** Keep going through these same steps to add as many targets as you want up to 30 per hole.

**Step 15:** When need to play the next hole, simply press the “Increase” button go up one hole.

**Step 16:** Add your desired edits to that hole if you need to.

**Step 17:** When you are finished with the entire course, press the “Course” button.

**Step 18:** Tap “Save Course” press the “Select” button to save the entire course that you edited! Press the “OK” button to confirm.

**Step 19:** You look at your course list the new “My” (the course name) course has been saved. The word “My” is in there, so you know that this is the one you edited to meet your needs!

You are now finished creating your edits!! You can press the “Back” button to get to the home screen of your Guru. When you go to play your course next time, you will see the downloaded version of the course from our list on our Guru, and you will see your edited version as well. If you wish to delete the course you downloaded from our list, simply login to our website and uncheck the “Use” box next to it.

# 8

## 8 How to Upload and View Your Played Rounds

Once you are finished playing you can view your round/s through your computer... When you Sync the Guru after playing, your rounds get sent two places: our server for back up, and your computer. Below are steps on how to view them.


### ***1.40 How to View Your Rounds via Your Computer***

- a. Play your round and properly save scores on the Guru.
- b. Plug the Guru into the computer using the USB cord.
- c. Open up your Guru Utility.
- d. Click Sync and wait for it to fully finish Syncing.
- e. Go to our web site <http://onpin.gpsgolfguru.com>
- f. Log-in to your account.
- g. Go to the Members Tab and select My Rounds and view your golfing rounds.
- h. You can download your rounds to your computer by pressing the CSV button on the top right of the My Rounds screen. If you have Excel it should import directly.

## 9 Golf Guru Application Menu Items

The Golf Guru main menu is accessed by pressing the Show button, then pressing the “Menu” button.

The menu contains a list of the following items:

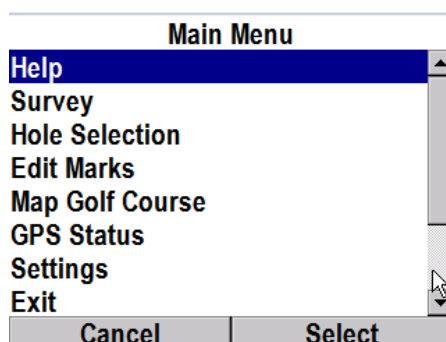

### 1.41 Help

Select the “Help” option when you need additional information to assist in navigating the Golf Guru User interface. While on any screen, press the “Menu” button, and select “Help” by tapping it. Then, press “Select”. A “help screen” will appear with tips and helpful information about your current screen.

### 1.42 Hole Selection

The “Hole Selection” option allows the golfer to manually enter the desired hole to be played. Selecting “Hole Selection” takes you to the “Hole Selection” screen where the golfer can Tap Hole # and use “Increase” button to change the hole...

## **1.43 Map Golf Course**

To make a unique map of a golf course using the Golf Guru, select the “Map Golf Course” function by tapping to highlight, and press “Select” button. Follow the instruction in Section 7 to create and map a new golf course.

## **1.44 GPS Status**

The “GPS Status” menu item contains GPS information specific to your Golf Guru. Under the “Tools” option, there are pages used exclusively for diagnostic purposes.

## **1.45 Settings**

Use the “Settings Screen” to adjust and change your Golf Guru settings. Press the “Save” button to save your setting selections. Below are the settings that can be adjusted through this screen:

- Time: Set in hardware settings
- Scoring On: The Golf Guru will come defaulted with Scoring turned off. Use the “→ Increase” button to turn scoring on.
- Statistics On: The Golf Guru will come defaulted with Statistics turned off. Use the “→ Increase” button to turn statistics on. Scoring must be turned on if the golfer wishes to capture their statistics.
- Adv Stats On: Scoring and Statistics must be on for Advanced stats to work.
- Adv Mode: Select how you want the Golf Guru to advance to the next hole. There are three options; “Auto”, “Prompt”, or “Manual”. (Refer to Section 6.1.3 to learn more.)
- Auto Delay: Select the delay in terms of seconds for advancing to the next hole. Choices are 30, 60, and 90 seconds. (Refer to Section 6.1.4 to learn more.)
- Dist Mode: This is where you can select for the Guru to measure in Yards or Meters.

## **1.46 File Management**

This function is for GPS Golf Guru Personnel support functions. End user should not use this function.

## **1.47 About**

This function shows the Guru Version Information.

# 10

## 10 Helpful Hints

- Ensure there is a full battery level before beginning play. A full charge takes seven (7) hours. The Golf Guru will last up to 12 plus hours on a full charge using golf course settings (30 second backlight on). There is no need to turn it off during a round when it is fully charged. Using the sleep feature will greatly enhance battery life (see hardware manual for settings).
- Do not use any harsh chemicals on the Guru screen, you should use cleaner designed for Touch Screens
- We highly recommend you use a clear screen protector to protect your screen from damage.
- Do not use any chargers or USB cables that did not come supplied with your Golf Guru unit or that are approved by GPS Golf Guru.
- Treat your Golf Guru unit as you would treat your cell phone. Do not store it in extreme temperatures or submerge it in water.
- The Guru is one of the most sensitive GPS units on the market today, but occasionally you may lose signals when you're under bridges or other types of cover. Simply move out from under the cover, and the Guru will resume receiving satellite signals.
- All Gurus come with factory presets and you may need to check the settings to personalize it to your benefit.

# 11

## **11 Upgrading Your Guru Software**

We are working hard to add new features to the Guru. Each time we upgrade the Guru to include more features, you will be notified of this to be able to download the new software versions. Downloads are free.

Please follow the steps below when upgrading to a newer software version!

### ***1.48 Install New Guru Utility***

**Step 1:** If the Guru Utility is running, close the application.

**Step 2:** Click on “Control Panel” on your computer in your Start Menu.

**Step 3:** Click “Add/Remove Program” to remove the old Guru Utility.

**Step 4:** Select the Guru Utility to be removed and click “OK”.

**Step 5:** Install the new Guru Utility by following instructions under the Support page of our website in the Update link.

### ***11.2 Upgrade New Guru Utility to New Version***

**Step 1:** Plug your Guru into your computer.

**Step 2:** Open the Guru Utility.

**Step 3:** Click “Sync”.

**Step 4:** Follow the instruction on your handheld Guru screen.

# 12

## 12 Shot Distance Table

The Mark feature allows you to enter in what club you used, how many yards you hit the ball, and what ball position you were at, such as tee box, fairway, bunker, etc.

**STEP 1:** To use this feature make sure you have the course pulled up in “play mode” to where you see the distances to the targets and green.

**STEP 2:** Stand where you are about to hit the ball and press “Mark” button. You have the option to select your club and ball position right then, or you can select those later if you wish.

**STEP 3:** To get the Guru to actually start calculating your distances, push Mark button again. The words “To Mark: 0” will appear at the bottom left of your Guru screen.

**STEP 4:** Hit the ball and go to where it landed. Position the Guru over where the ball landed and press Mark button again. Your shot distance will be recorded.

**STEP 5:** The Guru will automatically go to Mark # 2. When you are ready to hit the ball again, push Mark button, so the Guru can start counting the distance again, and select your club and ball position now or later when desired.

**STEP 6:** To edit or delete your marks, press the Menu button. Tap Edit Marks and press “Select” button. In here, you can select which mark you wish to edit as well as change the ball position and club you used. This is where you can also add the ball position and club you used if you haven’t entered them in yet. You can also delete your marks in here.

# 13

## **13 Contact Information**

**Sales:** (02) 8088 0740 or [sales@on-pin.com](mailto:sales@on-pin.com)

If you have questions about ordering, or would like to order over the phone, call or email the sales department.

**Customer Service/Tech Support:** [support@on-pin.com](mailto:support@on-pin.com)

If you have questions about the product, accessories, the website, or the Guru Utility, call or email customer service/tech support.